

MXP Menu Restore Hidden Shortcut *(Software F3 and later)*

F3 new short cut (key combination) to set the "Menu on PC" and "Menu on TV" to On for set top systems (550MXP\770MXP\880MXP\990MXP) and the 3000MXP to "VGA out Mode to Main" .

This is done by pressing the 'phone book key' on the remote control 5 times and the number '2' key.

F3 still supports the shortcut (key combination) to switch language back to English by pressing the 'phone book key' on the remote control 5 times and selecting the number '1' key.

CLASSIC Menu Restore Hidden Shortcut

To restore the onscreen menu to the Video output of a Classic codec once it has been set to the VGA output, enter the following sequence via the remote control:

Snapshot
Farend
Snapshot
1

The same process followed by a '2' in place of the '1' will reset the language to English.